


BatMax Installation Mobile Phone 3G Mobile Smartphone



Turn off your mobile phone.
Remove the cover.



Remove your battery.
Do not remove the paper from the back of BatMax.

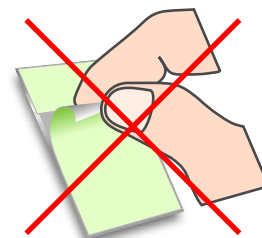

Install BatMax inside the battery compartment.
The white active side of BatMax must face the battery.
Do not stick BatMax on the battery.
To be effective, BatMax must fit 60-80%
of the surface of the battery.
Reinstall the battery.



Turn on your mobile phone.
Charge.
You will immediately notice a battery life improvement
and obtain the maximum effect after 7-10 cycles.